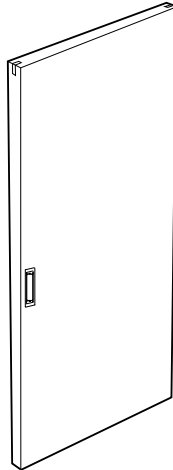
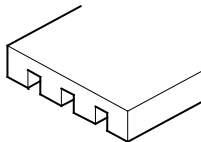
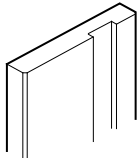


AK NATURE^{ナチュレ} 内装引戸ユニット 3本引違

⚠ 施工にあたってのご注意

- | 扉 梱 包 | | 枠 梱 包 | |
|---|--------------|-------|--|
| 扉本体 | | | |
| 3 | | | |
|  | 上枠 | 1 |  |
| | 縦枠
(カバー付) | 2 |  |
| | Yレール | 3 |  |

スタンダード(固定枠)		
サイズ	FW	FH
3本引違	2600	2047

▼FL

引手中心=扉下端~900

Technical drawing of a door assembly. The drawing shows a side view of a door with a handle and a lock. Dimensions are provided for the overall width (FW=2600), the width of the door leaf (DW=900), and the height of the door (FH=2047). The drawing also shows the door frame and the handle assembly. The handle is labeled '51' and the lock is labeled '34'. The door is shown in an open position, with the handle and lock visible on the inner leaf. The drawing is a technical drawing, showing the door and its components in a simplified, schematic manner. The dimensions are given in millimeters. The drawing is a side view, showing the door and its frame. The door is shown in an open position, with the handle and lock visible on the inner leaf. The drawing is a technical drawing, showing the door and its components in a simplified, schematic manner. The dimensions are given in millimeters. The drawing is a side view, showing the door and its frame. The door is shown in an open position, with the handle and lock visible on the inner leaf.

34	DH=2013	60
12	OH=2010	25
	FLH=2035	
	FH=2047	

Technical drawing of a cross-section of a road structure, likely a bridge or overpass, showing dimensions and elevations.

Top View Dimensions:

- Overall width: 155/175
- Column spacing: 147/167
- Column width: 20.5 (each of three columns)
- Side offset: 29/39
- Right side offset: 15.5/25.5

Column Elevations (from bottom level):

- Left column: 31.9
- Second column: 31.8
- Third column: 31.8
- Right column: 31.9

Column Cross-Section Dimensions:

- Column width: 4
- Column height: 20.5 (each of three columns)
- Right side offset: 15.5/25.5

Bottom View Dimensions:

- Column width: 3.0 (each of four columns)
- Overall width: 12


Labels and Notes:

- 戸車中心 (Door Center)
- 縦枠中心 (Vertical Frame Center)
- ▼FL (Bottom Level)
- DH=2013
- OH=2010
- FLH=2035
- FH=2047


枠組立ビス
3.4×60

2. 枠の取付け

- ①開口部の水平・垂直を確認してください。
- ②躯体取付ビスを使って、枠を取り付けてください。

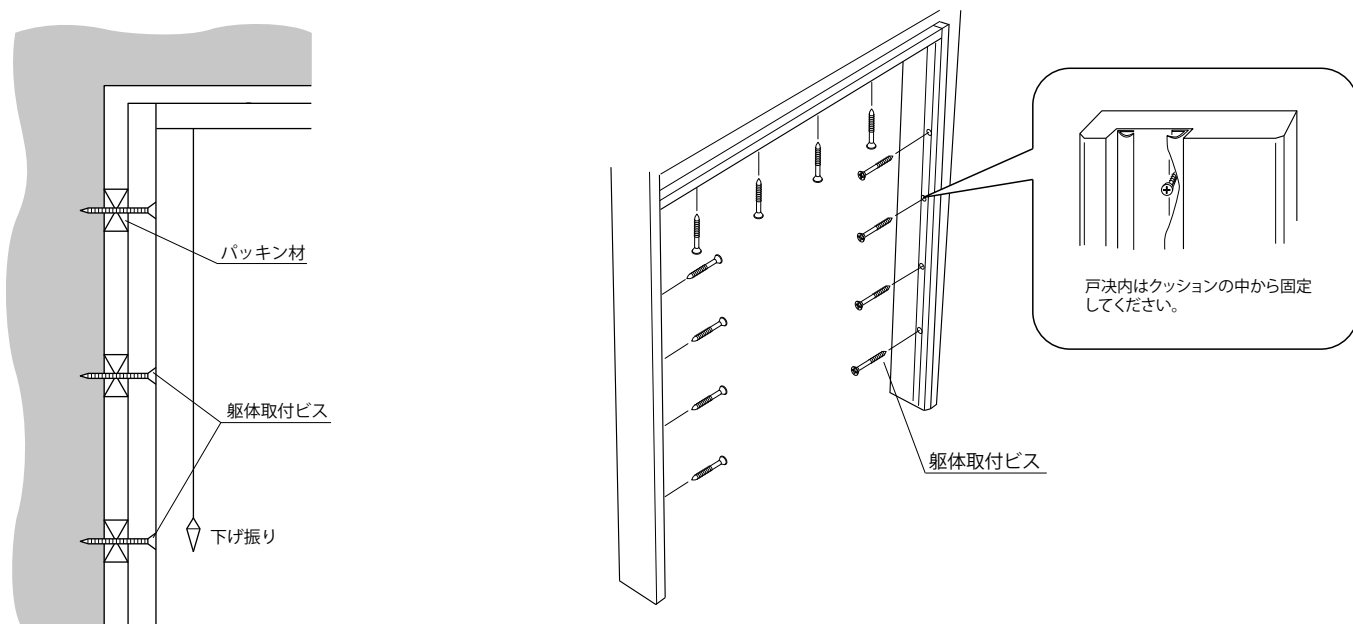


※下げ振りなどで建付けを確認しながら取付けてください。
※施工後の枠が下図にならないように水平・垂直および開口寸法の確認をしてください。

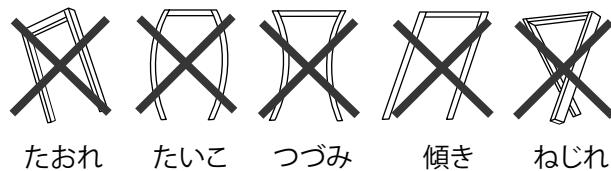

3. 部品の取付け

- ①戸シャクリカバーを縦枠の溝に両面テープで取り付けてください。
 - ②Yレールをフロアの溝に埋め込んでください。
- 【注意】必ず当て木を使用してください。

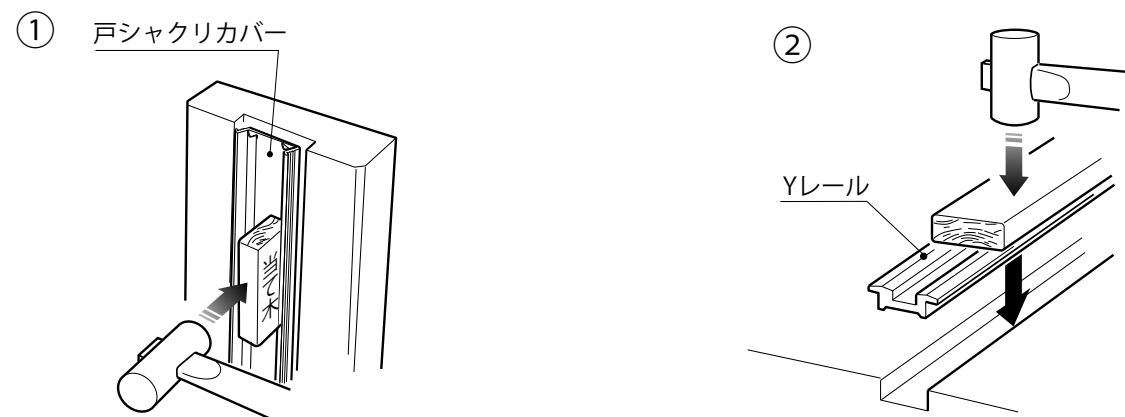

注意 戸シャクリカバーが浮かないように、当て木などを添えてしっかり打ち込んでください。

4. 扉の吊込み


- ①枠に扉を吊込んだのち、開閉して状態を確認してください。

注意

扉の保護のため、一度扉をはずし建築工事完了後に吊り込むことをお勧めします。

5. 建付け調整

- ①下戸車で、扉の上下調整と、前後調整ができます。

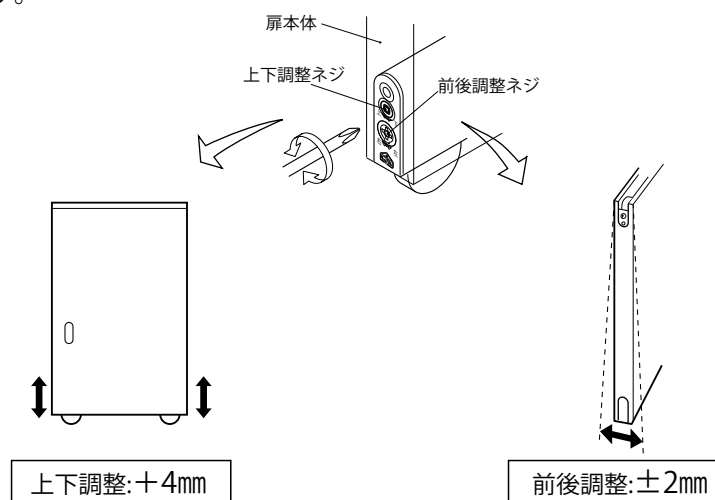

施工終了後の確認

施工が完了しましたら、下記の点について確認してください。

- ◆すべての部品が取付けられているか、また間違った取付けがされていないか確認してください。
 - ◆取付けネジが所定の位置に取付けられているか確認してください。
 - ◆ネジの緩みや枠のガタツキがないか確認してください。
 - ◆ドア本体の開閉がスムーズに行えるか、施工上の不具合がないか再度確認してください。
- ※枠・扉各々の取付けが完了しましたら、当て傷・擦り傷等がつかないようにお手持ちの養生材等で枠・扉の養生を完全に行ってください。
- 養生の際には、比較的粘着力の弱い紙製のマスキングテープ等で止めてください。

△ ご注意 △

ポリエチレン繊維等の養生テープは、粘着力が強いため使用しないでください。

※ダンボールはリサイクル品です。地球環境保護のため、回収業者に引取っていただくようご協力をお願いいたします。
※縦枠上部の小口に無塗装部分が見える場合は、補修セットでタッチアップして処理してください。

＜お手入れ方法＞

- お手入れは、うすめた中性洗剤で汚れを落とし、乾いたやわらかい布で軽く拭いてください。
- シンナー等の溶剤や強い洗剤を使用しないでください。使用しますと変色・変質しますので絶対に使用しないでください。
- ペンキ・グリース・油・パテ等が付着した場合は、速やかに拭取ってください。